

## DESCRIPTIONS

480W, AC/DC DIN-Rail Power Supply



RoHS



Report

CE-E1070-EN



Report

BS EN 62368-1

## FEATURES

- Universal 3x320-600VAC or 450-800VDC Input voltage
- Active PFC, PF > 0.95
- Operating ambient temperature range: -30°C to +70°C, 60°C @ 100% load without derating
- Standard DIN-Rail mounting
- High efficiency, high reliability
- LED indicator for output status
- 150% peak power lasts for 4.5s
- Output short circuit, over-current, over-voltage, over-temperature protection
- Supporting parallel (2+1 current sharing) and series application
- Fault alarm function, DC OK, against backflow voltage
- Double-sided conformal coating, salt-spray proof
- 485 Communication, remote shutdown (PS ON)
- Operating altitude up to 5000m
- OVC III (Safety according to EN61010)
- Safety according to ANSI/ISA 71.04-2013 G3
- Safety according to IEC/UL62368, EN61010, UL508
- 3 years warranty

## APPLICATIONS

- Industrial control equipment
- Factory automation
- Mechanical electrical equipment



## Selection Guide

Certification	Part No.	Output Power (W)	Nominal Output Voltage and Current (Vo/Io)	Output Voltage Adjustable Range (V)	Efficiency at 400VAC (%) Typ.	Max. Capacitive Load (μF)
EN/BS EN	ADTF480-24	480	24V/20A	24-28	95	20000
	ADTF480-36		36V/13.3A	36-42	95.3	13000
	ADTF480-48		48V/10A	48-56	95.6	10000

Note: \*The product picture is for reference only, for details, please refer to the actual product.

## Specifications

Product Characteristics	Item	Operating Conditions		Min.	Typ.	Max.	Unit	
Input Specifications	Input Voltage Range	Rated input (Certified voltage)		380	--	480	VAC	
		AC input		320	--	600		
		DC input		450	--	800	VDC	
	Input Voltage Frequency	AC input rated frequency		50	--	60	Hz	
		AC input		45	--	63		
	Input Current	Input rated current		--	--	1.0	A	
		400VAC		--	--	1.0		
		480VAC		--	--	0.8		
	Inrush Current	400VAC	Cold start	--	1.34	10		
		480VAC		--	1.34	10		
	Power Factor	400VAC	Normal temperature, rated load	PF≥0.95				
		480VAC						
	Leakage Current	480VAC		< 2mA				
	Hot Plug			Unavailable				
Output Specifications	Output Voltage Accuracy	Full load range		--	±1	--	%	
	Line Regulation	Rated load		--	±0.5	--		
	Load Regulation	0% - 100% load		--	±0.5	--		
	Ripple & Noise*	20MHz bandwidth (peak-to-peak value)		--	100	--	mV	
	Temperature Coefficient			--	±0.03	--	%/°C	
	Minimum Load			--	0	--	%	
	Dynamic Minimum Load			10	--	--		
	Standby Power	400VAC			--	8.2	12	W
		480VAC			--	10	15	
	Hold-up Time	400VAC			18	22	--	ms
		480VAC			18	22	--	
	Short Circuit Protection			Constant current mode, continuous, self-recover				

Output Specifications	Over-current Protection			120% - 150% Io, enter constant current mode after 4.5s of normal output, automatic recover after fault condition is removed				
				≥150% Io, enter constant current mode, automatic recover after fault condition is removed				
	Over-voltage Protection		24V	≤35VDC (Hiccup, self-recover)				
			36V	≤53VDC (Hiccup, self-recover)				
			48V	≤60VDC (Hiccup, self-recover)				
	Over-temperature Protection		Over-temperature Protection start		--	--	85	℃
Over-temperature Protection release			65	--	--			
General Specifications	Isolation Test	Input - 	Electric strength test for 1min., leakage current < 5mA		2500	--	--	VAC
		Input - Output			4000	--	--	
		Output - 	Electric strength test for 1min., leakage current < 10mA		1500	--	--	
		Output - DC OK	Electric strength test for 1min., leakage current < 1mA		500	--	--	
	Insulation Resistance	Input - 	Environment temperature: 25±5℃ Relative humidity: < 95%, non-condensing Test voltage: 500VDC		50	--	--	MΩ
		Input - Output			50	--	--	
		Output - 			50	--	--	
	Operating Temperature				-30	--	70	℃
	Storage Temperature				-40	--	85	
	Storage Humidity		Non-condensing		20	--	90	%RH
	Operating Humidity				10	--	95	
	Switching Frequency*		PFC		40	--	300	kHz
			DC-DC		60	--	150	
	Power Derating		Operating temperature derating	+60℃ to +70℃	2.5	--	--	%/℃
			Input voltage derating	320VAC - 350VAC	0.667	--	--	%/VAC
	Safety Class				CLASS I, ANSI/ISA71.04-2013			
	MTBF		MIL-HDBK-217F@25℃		≥250,000 h			
	Pollution Degree		2					
Mechanical Specifications	Case Material		Metal (AL5052, SPCC)					
	Dimensions		80.0mm x 124.0mm x 127.0mm					
	Weight		1250g (Typ.)					
	Cooling Method		Free air convection					
Environmental Characteristics	Sinusoidal Vibration		10 - 200Hz, 2g, three directions of X, Y, Z axis		GB2423.10, IEC60068-2-6			

Functional Specifications	Remote Control Switch	0 - 0.8VDC power turn-on		0	--	0.8	VDC
		4 - 20VDC power turn-off		4	--	20	
	DC OK Signal	Full input voltage range, full load range	DC OK power on	0.95Vo - Vo			
			DC OK power off	< 0.90Vo			
	Oring*			Support direct parallel use, achieve 2+1 parallel redundancy			
	Current Sharing Accuracy*	When multiple units are connected in parallel, the sub-modules shunt more than 50% of the rated load		--	±5	--	%
	LED Signal	Main output status indication	Normal work	Green On			
			Peak power operation or about to enter over temperature protection	Red On			
			Power Off (No AC input) or PS ON Off	Turn-off			
RS485-B, RS485-A			RS485 communication				



Note: 1.\*The “Tip and barrel method” is used for ripple and noise test, output parallel 47uF electrolytic capacitor and 0.1uF ceramic capacitor.  
2\*.The power supply has two converters with two different switching frequencies.  
3\*.Indoor use meets UL 61010 certification standards.  
4\*. When multiple units work with current sharing, the output voltage deviation of each power supply working alone shall not exceed 100mV.

### Electromagnetic Compatibility (EMC)



Electromagnetic Compatibility (EMC)	Emissions	CE	CISPR32/EN55032 CLASS B				
		RE	CISPR32/EN55032 CLASS B				
		Harmonic current	IEC/EN61000-3-2 CLASS A				
		Voltage flicker	IEC/EN61000-3-3 Fulfilled				
	Immunity*	ESD	IEC/EN 61000-4-2	Contact ±8KV/Air ±15KV	perf. Criteria A		
		RS	IEC/EN 61000-4-3	20V/m	perf. Criteria A		
		EFT (Input)	IEC/EN 61000-4-4	±4KV	perf. Criteria A		
		EFT (Output)	IEC/EN 61000-4-4	±2KV	perf. Criteria A		
		EFT (DC OK)	IEC/EN 61000-4-4	±2KV	perf. Criteria A		
		Surge (Input)	IEC/EN 61000-4-5	line to line ±2KV/line to PE ±4KV	perf. Criteria A		
		Surge (Output)	IEC/EN 61000-4-5	Vo+ to Vo- ±500V; Vo+/Vo- to PE ±1KV	perf. Criteria A		
		Surge (DC OK)	IEC/EN 61000-4-5	DC OK to PE ±1KV	perf. Criteria A		
		CS	IEC/EN61000-4-6	20 Vr.m.s	perf. Criteria A		
		Voltage dips, short interruptions and voltage variations immunity	IEC/EN61000-4-11 0% 70%			perf. Criteria A	

Note:\*EFT, output voltage accuracy within 5%, in accordance with perf. Criteria A standards.



## Characteristic Curve

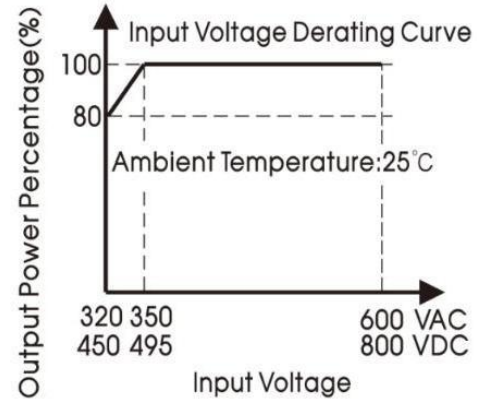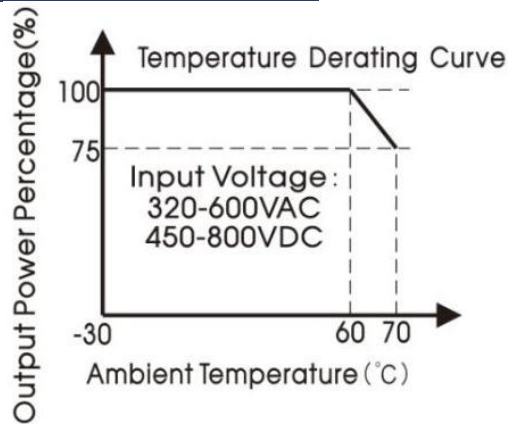

- Note: 1. With input voltage between 320 - 350VAC/450 - 495VDC the output power must be derated as per the temperature derating curves;  
2. This product is suitable for applications using natural air cooling;  
3. The operating temperature and the ambient temperature are determined according to the air temperature at 2cm below the power supply.

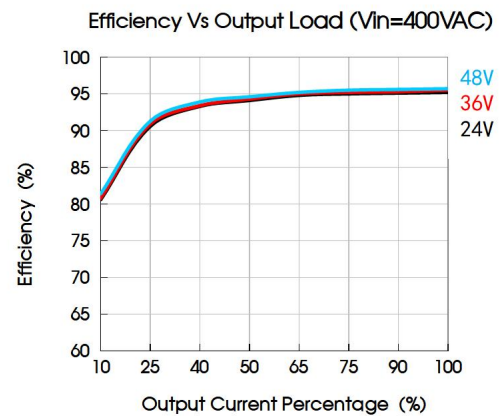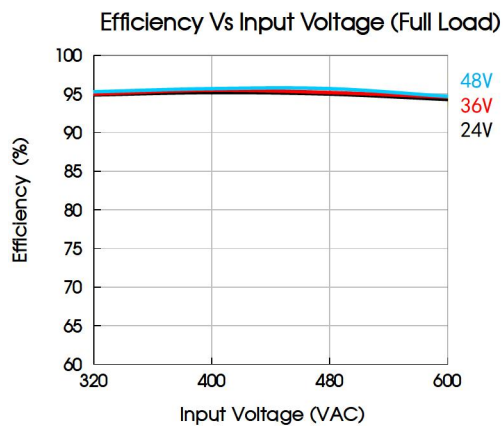

## Installation

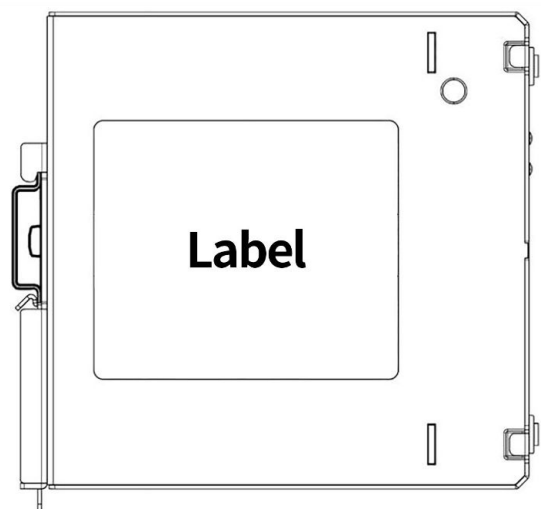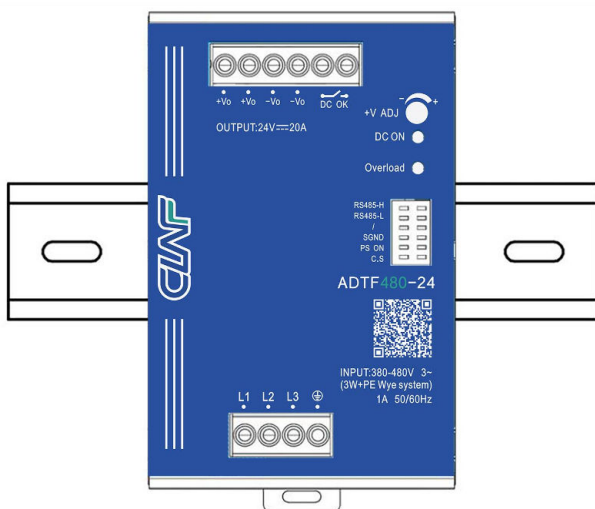


Note: Keep the following installation clearances: 20mm on top, 20mm on the bottom, 5mm on the left and right sides are recommended when the device is

loaded permanently with more than 50% of the rated power. Increase this clearance to 15mm in case the adjacent device is a heat source (e.g. another power supply).

## Materials required in the installation


1	Product	1 PC
2	Phillips screwdriver Slotted screwdriver	1 PC
3	TS35/7.5 or TS35/15	1 PC
	24-10AWG Wire	/ PCS
4	The content is for reference only. Regarding the actual wire diameter and tightening torque, refer to the dimensional drawing.	

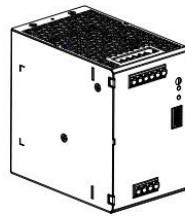


Product



Phillips screwdriver  
Slotted screwdriver  
Diameter of the cutting  
Diameter: 3mm

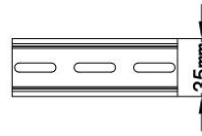


TS35/7.5 or TS35/15

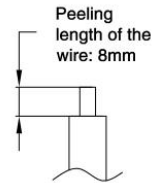


24-10AWG Wire

## Installation Steps ①-②


① Clamp the buckle of the product into the TS35 DIN rail;

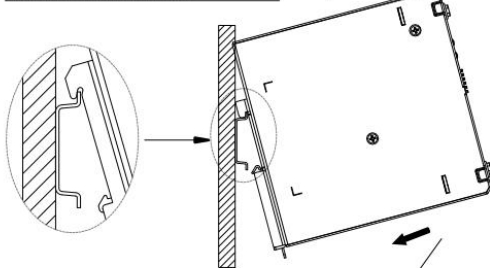


② Push the product vertically towards the TS35 DIN rail until hearing the sound of the buckle snapping into it.

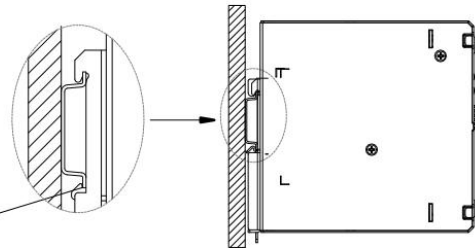

## Disassembly Steps ③-④

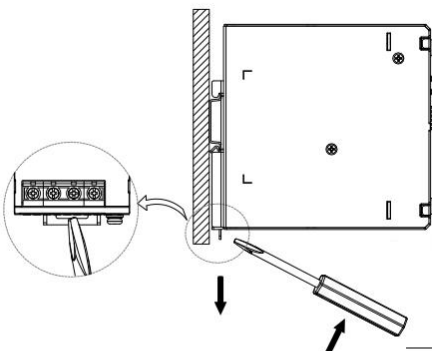


③ After inserting the Slotted screwdriver into the square groove at the bottom of the buckle, push the slider of the buckle downward in the direction shown in the figure.

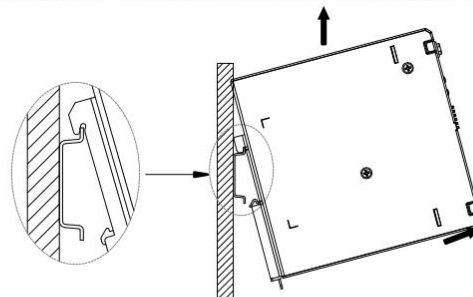


④ Hold the bottom of the product and push it outwards, then lift the product up to take the product out of the DIN rail.

## Wiring / Unwiring Steps ⑤-⑥

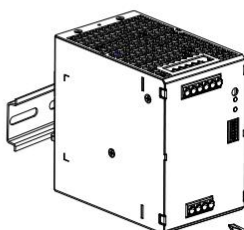



⑤ Use the Phillips screwdriver to loosen the terminal screws, insert the head of the wire into the bottom of the terminal, and then turn the screwdriver to tighten the terminal screws.


Tightening torque:  
Max0.5N · m(For reference);

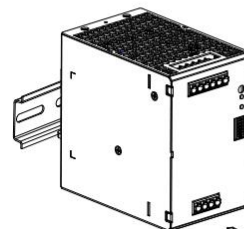



⑥ The Phillips screwdriver to loosen the terminal screws and pull the wires out of the terminal holes

## Dimensions and Recommended

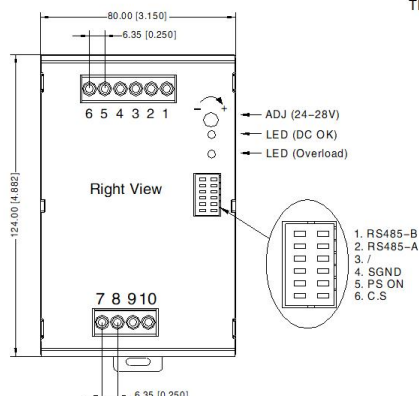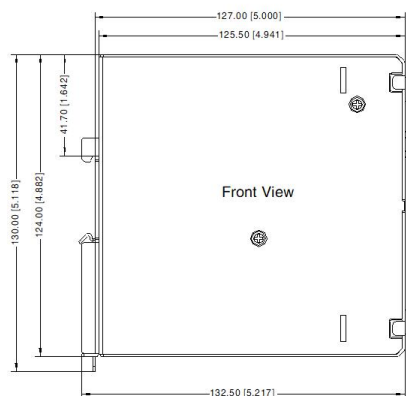


THIRD ANGLE PROJECTION 

Pin-Out	
Pin	Mark
1	DC OK
2	
3	-Vo
4	-Vo
5	+Vo
6	+Vo
7	L1
8	L2
9	L3
10	

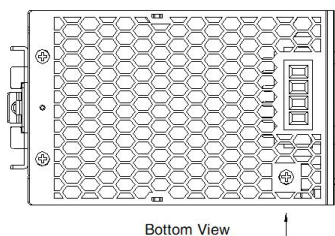

Bottom View

11

10、11 any position must be connected to the earth()

Note:  
Unit: mm[inch]  
ADJ: Output adjustable resistor  
Wire range: Input: 22-10AWG  
Output: 24V 14-10AWG  
36V 16-10AWG  
48V 18-10AWG  
Signal: 22-16AWG  
Input Tightening torque: Max 0.5 N-m  
Output Tightening torque: Max 0.5 N-m  
Mounting rail: TS35, rail needs to connect safety ground  
General tolerances:  $\pm 1.00[\pm 0.039]$





**WARNING** Risk of electrical shock, fire, personal injury or death:

**AVERTISSEMENT** AVERTISSEMENT Risque de choc électrique, d'incendie, de blessures corporelles ou de décès :

1. Do not use the power supply without proper grounding (Protective Earth). Use the terminal on the input block for earth connection and not one of the screws on the housing;  
N'utilisez pas l'alimentation électrique sans mise à la terre appropriée (Terre protectrice). Utilisez le terminal sur le bloc d'entrée pour la connexion terrestre et non pas une des vis sur le boîtier;
2. Turn power off before working on the device, protect against inadvertent re-powering;  
Éteignez l'alimentation avant de travailler sur l'appareil, protégez-vous contre la réénergisation accidentelle;
3. Make sure that the wiring is correct by following all local and national codes;  
Assurez-vous que le câblage est correct en suivant tous les codes locaux et nationaux;
4. Do not modify or repair the unit;  
Ne modifiez pas ou ne réparez pas l'appareil;
5. Do not open the unit as high voltages are present inside;  
Ne modifiez pas ou ne réparez pas l'appareil;
6. Use caution to prevent any foreign objects from entering the housing;  
Faire preuve de prudence pour empêcher les objets étrangers d'entrer dans le logement;
7. Do not use in wet locations or in areas where moisture or condensation can be expected;  
Faire preuve de prudence pour empêcher les objets étrangers d'entrer dans le logement;
8. Do not touch during power-on, and immediately after power-off, hot surfaces may cause burns;  
Ne touchez pas pendant l'alimentation et, immédiatement après l'alimentation, les surfaces chaudes peuvent causer des brûlures.
9. For ambient temperature  $\leq 60^{\circ}\text{C}$ , use  $\geq 90^{\circ}\text{C}$  - copper wire only; for ambient temperature  $> 60^{\circ}\text{C}$  to  $85^{\circ}\text{C}$ , use  $\geq 105^{\circ}\text{C}$  - copper wire only; use only wires with a minimum dielectric strength of 300V (input) and 60V (output);  
Température ambiante  $\leq 60^{\circ}\text{C}$ , utiliser  $\geq 90^{\circ}\text{C}$  - seulement fils de cuivre; Température ambiante  $> 60^{\circ}\text{C}$  et  $85^{\circ}\text{C}$ , utiliser  $\geq 105^{\circ}\text{C}$  - seulement fils de cuivre; Uniquement pour l'utilisation de fils de cuivre d'une résistance d'isolation minimale de 300V (d'entrée) et 60V (de sortie).



Note:

1. Unless otherwise specified, parameters in this datasheet were measured under the conditions of  $T_a=25^{\circ}\text{C}$ , humidity  $< 75\%$  RH with nominal input voltage and rated output load;
2. The room temperature derating of  $3.5^{\circ}\text{C}/1000\text{m}$  is needed for operating altitude greater than 2000m;
3. In order to improve the efficiency at high input voltage, there will be audible noise generated, but it does not affect product performance and reliability;
4. The out case needs to be connected to the earth(  $\oplus$  ) system when the terminal equipment in operating;
5. The output voltage can be adjusted by the ADJ, clockwise to increase;
6. The power supply is considered a component which will be installed into a terminal equipment. All EMC tests should be confirmed with the final equipment.



## ADTF480-xx Power Supply Application Notes

### Content

1. Mechanical Specification .....	11
1.1 Input Terminal (CN1) .....	11
1.2 Output Terminal (CN2) .....	12
1.3 Signal Connection Terminal (CN5) .....	12
1.4 Red And Green Status Display LEDS .....	13
1.5 Output Voltage Adjustment Knob .....	13
2. Function Manual .....	14
2.1 Input Requirements .....	14
2.2 Output Requirements .....	14
2.3 Starting Time .....	14
2.4 Output Over-Voltage Protection (OVP) .....	15
2.5 Output Over-Current And Short Circuit Protection (OCP And SCP) .....	15
2.6 Peak Current Capabilities .....	16
2.7 Over Temperature Protection (OTP) .....	17
2.8 Output Power Derating .....	17
2.9 Remote Control Switch .....	18
2.10 DC OK Signal .....	19
2.11 Used In Series .....	19

2.12 Work In Parallel .....	20
2.12.1 Redundancy .....	20
2.12.2 Current Share .....	21
2.13 PC Monitoring .....	22
2.14 Available In 3-Phase 2-Wire Systems .....	23
2.15 Back Voltage Load .....	24
3. Installation Requirements .....	25
3.1 Safety Introduction .....	25
3.2 Safety Requirements .....	25
3.3 Installation Method .....	26

## 1. Mechanical Specification


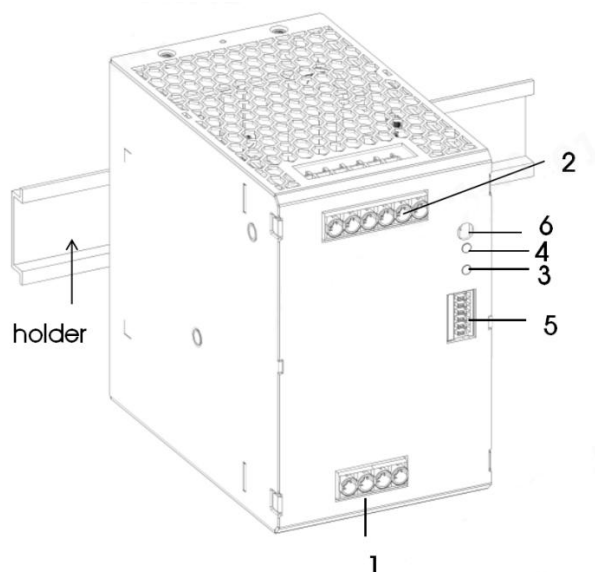



Figure 1: ADTF480-xx Appearance Information

Structure Instruction	
1	Input terminal (CN1)
2	Output terminal (CN2)
3	Red status display LED lights
4	Green status display LED lights
5	Signal connection terminal (CN5)
6	Output voltage adjustment knob

### 1.1 Input Terminal (CN1)

4 Position 6.35 mm Barrier Terminal Blocks is used as Input terminal.

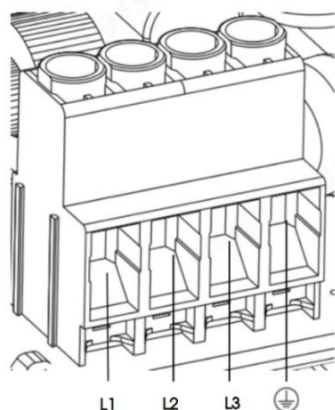


Pin	Features
L1	Live
L2	Live
L3	Live
	Protective Earth

Line size: 22-10AWG

Torque: 0.5Nm

## 1.2 Output Terminal (CN2)

6 Position 6.35 mm Barrier Terminal Blocks is used as Output terminal.

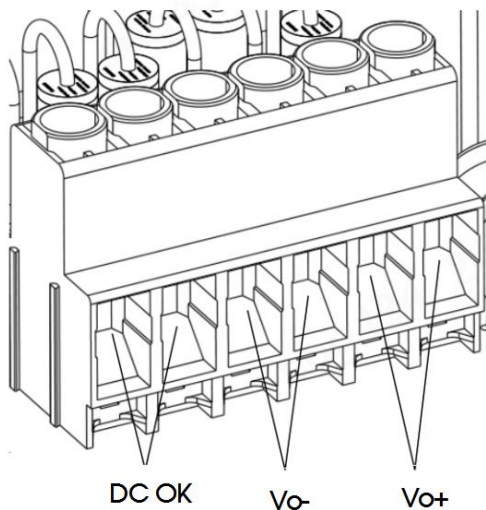

Line size: 14-10AWG (24V)


16-10AWG (36V)

18-10AWG (48V)

Torque: 0.5Nm

Pin	Features
Vo+	Positive output
Vo-	Negative output
DC OK	Judging output status


## 1.3 Signal Connection Terminal (CN5)

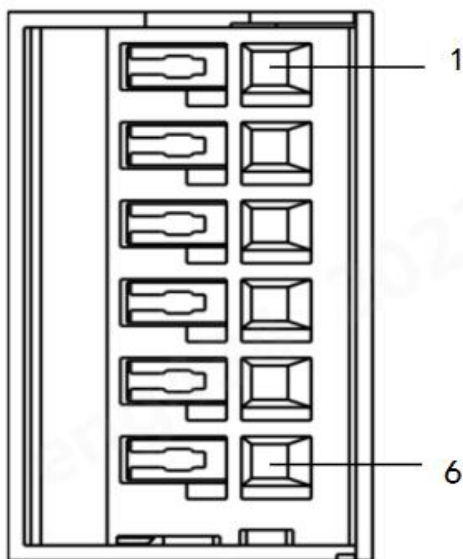

Pin	Mark	Features
1	RS485_B	Serial communication
2	RS485_A	Serial communication
3	/	/
4*	SGND	Signal terminal reference ground
5	PS ON	Remote control signal
6	C.S	Current sharing

Note: \*The reference ground of all pins on the signal terminal is pin 4.

## 1.4 Red And Green Status Display LEDS



Green Light






Red Light

Green Light	Red Light	State*
On	Off	Normal work
Off	On	Peak power operation or about to enter over temperature protection
Off	Off	Power Off (No AC input) or PS ON Off

Note: \*The LED lights indicate different working states of the power supply

## 1.5 Output Voltage Adjustment Knob

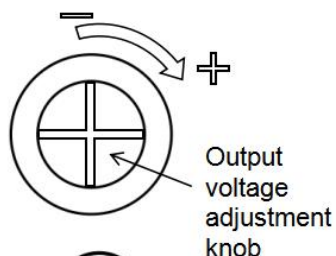

Model	Rated Output Voltage	Output Voltage Adjustable Range
ADTF480-24	24VDC	24-28VDC
ADTF480-36	36VDC	36-42VDC
ADTF480-48	48VDC	48-56VDC

## 2. Function Manual


### 2.1 Input Requirements

The AC input voltage and DC input voltage must be within the defined amount of electricity (reference data sheet), otherwise the power supply may not work properly or even malfunction. A 500V/4A fuse has been connected in series between the L1/L2 /L3 line inside the power supply. For better protection of the module, it is recommended that customers use a circuit breaker of no more than 4A. (Just for strengthen the protective purpose, not essential requirements)

### 2.2 Output Requirements

At any output voltage value, if it is necessary to operate normally, the highest pull current and power must not exceed the rated specified value, and the output current must not exceed the maximum output current value.


### 2.3 Starting Time

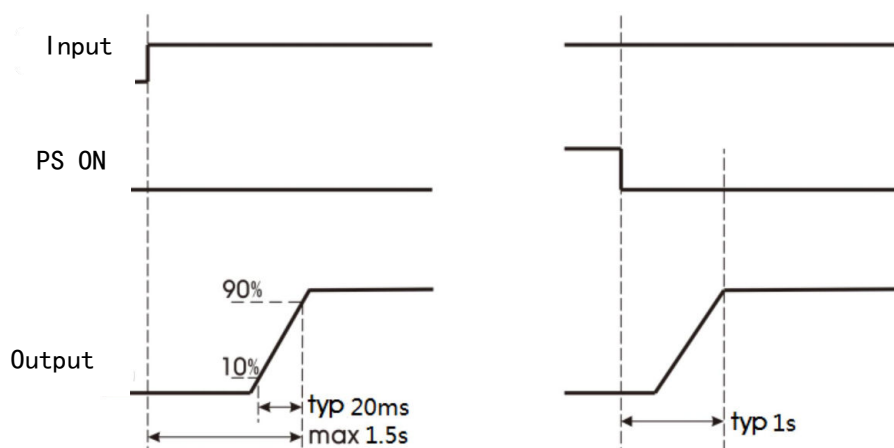


Item	Working conditions	Min.	Typ.	Max.	Unit
Start-up delay time	400VAC, full load	--	--	1.5	s

## 2.4 Output Over-Voltage Protection (OVP)

The main circuit output will be off when the output voltage reaches the over-voltage protection value. When it occurs, the output enters the hiccup mode with 1s. After the abnormal removed, the output returns to normal.

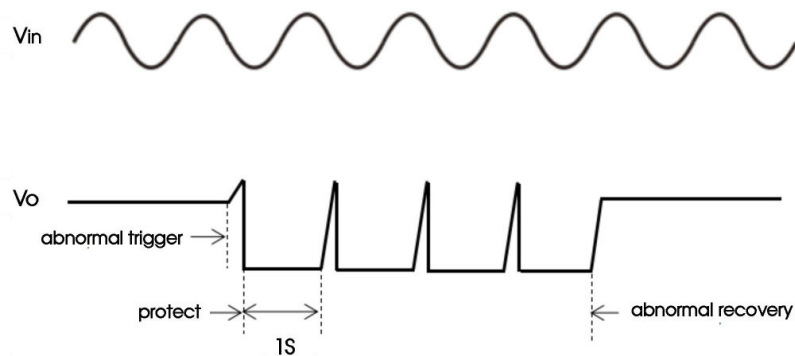


## 2.5 Output Over-Current And Short Circuit Protection (OCP And SCP)

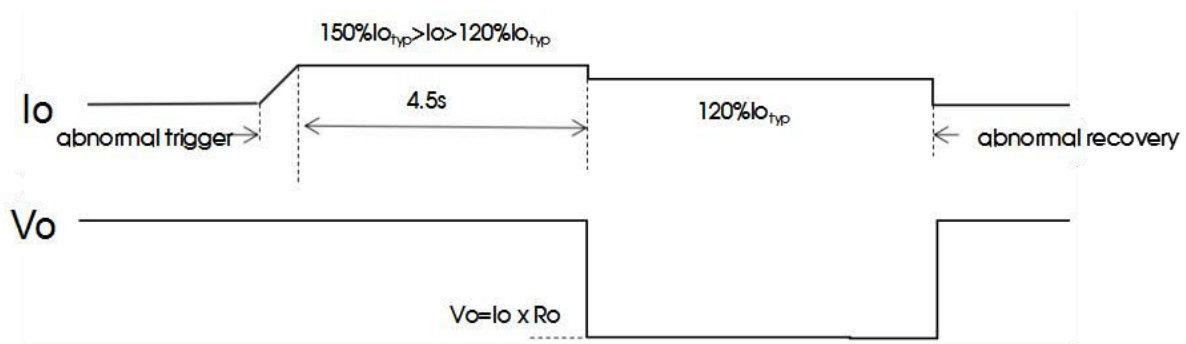

Constant current mode 1

Constant current mode 1: When the output current exceeds 120% of the rated output current, the output will immediately enter the constant current mode, and the current will maintain 150% of the rated output current for 4.5s, and then enter 120% of the rated output current, and the output voltage will drop at the same time, after the abnormal removed, self-recover.



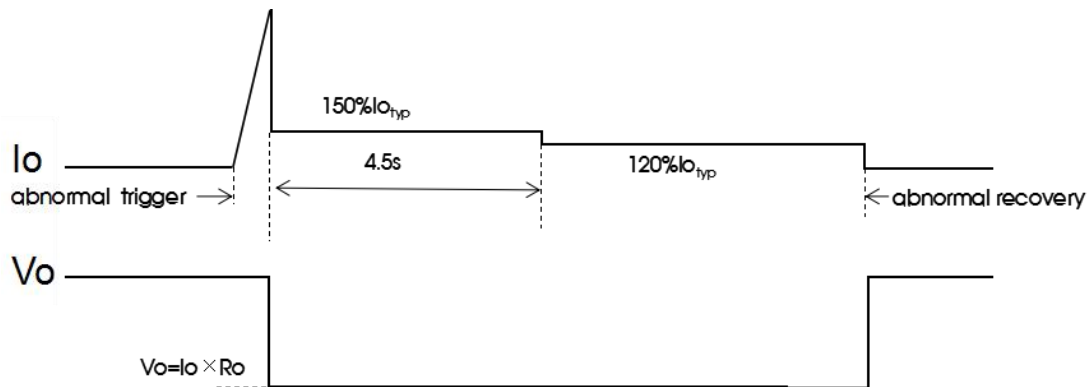

Constant current mode 2

Constant current mode 2: When the output current exceeds 150% of the rated output current, the output will immediately enter the constant current mode, and the current will maintain 150% of the rated output current for 4.5S, and then enter 120% of the rated output current, and the output voltage will drop at the same time, after the abnormal removed, self-recovery.

Note: The output voltage at constant current is determined by the output load, that is,  $V_o = I_o \times R_o$ . Where  $I_o$  represents the current value at constant current.  $R_o$  means output load value.

## 2.6 Peak Current Capabilities


The power supply is capable of outputting peak currents higher than certain short-term currents (up to several milliseconds).

This feature is helpful for loads with high current demands. Solenoids, contactors, and pneumatic modules typically have steady-state coils and pull-in coils.


Peak current capability also ensures safe operation of the circuit breaker behind the load circuit. The load branches are usually protected separately by circuit breakers or fuses. If a branch circuit is shorted or overloaded, a fuse or circuit breaker requires a certain amount of overcurrent to open in time. This

prevents voltage dips in adjacent circuits.

When the output current is large, there will be a voltage sag at the output terminal, while maintaining a large current output for a certain period of time, see the figure below for details.

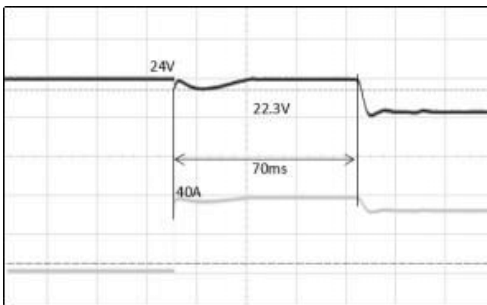

40A peak load (resistive) for 70ms, the output voltage drops from 24V to 22.3V

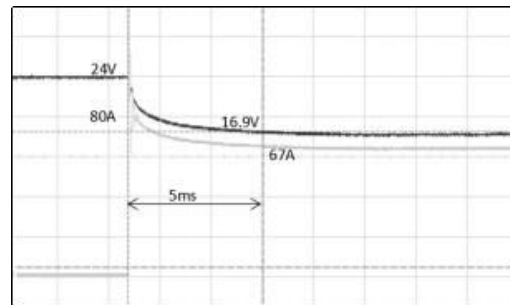

80A peak load (resistive) for 5ms, the output voltage drops from 24V to 16.9V

Voltage dip at peak current	Typical value	From 24V to 22.3V	40A, 70ms duration, resistive load
	Typical value	From 24V to 16.9V	80A, 5ms duration, resistive load



## 2.7 Over Temperature Protection (OTP)

When the ambient temperature of the power supply exceeds the rated temperature for a period of time, the power supply will turn off the output and enter the hiccup state. After the ambient temperature drops to the set value, the power supply will resume normal operation.


## 2.8 Output Power Derating

When the input voltage is greater than 350VAC (or 495VDC), only need to derate according to the temperature derating curve;

When the input voltage is lower than 350VAC (or 495VDC), the output power will be derated according to the following input voltage derating curve requirements after the temperature derating.

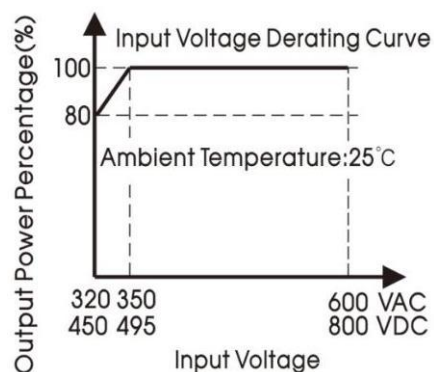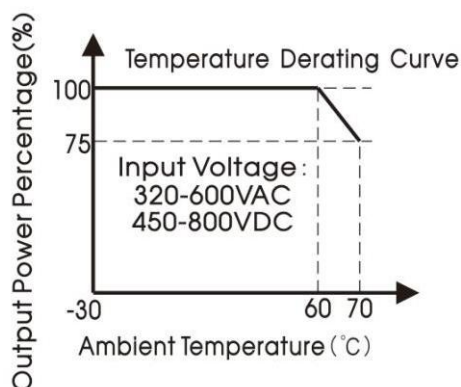

## 2.9 Remote Control Switch

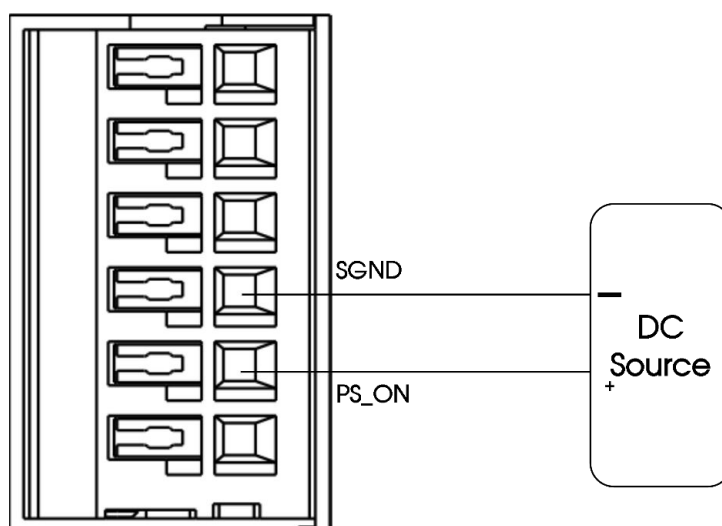


Between PS ON (Pin5) and SGND (Pin4) Switch	Output Status
DC Source power supply voltage is less than 0.8VDC	Normal output
DC Source supply voltage is greater than 4VDC less than 20VDC	Output Off

If the power module is connected to the power supply, it can be controlled by the external voltage between the PS ON signal pin and SGND.

## 2.10 DC OK Signal

The DC OK signal is used to monitor whether the power supply is working normally. This signal is on the DC OK pin of the output terminal CN2. When the output is greater than 95% of the rated voltage of the output, the DC OK signal is activated, the DC OK at the output terminal is connected, and the green light is on at the same time. When the output voltage is less than 90% of the rated voltage of the output, the DC OK of the output terminal is disconnected, and the green light is off at the same time.

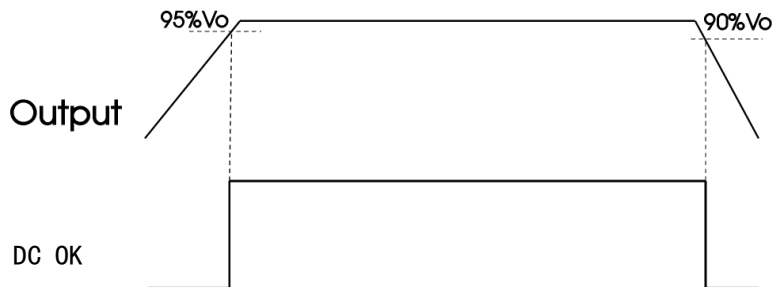

## 2.11 Used In Series


The same type of power supply can be connected in series with each other to increase the output voltage. Under the premise that the total output does not exceed 150VDC, any number of power supplies can be connected in series as needed. Voltages in excess of 60VDC are no longer considered Safety Extra Low Voltage Circuits (SELV) and can therefore be dangerous. When installing such voltages, it must be protected against touch.

Please avoid generating feedback voltage to the output terminals (eg from a decelerating motor or battery).

Keep a 15mm (left/right) installation gap between the two power supplies and avoid installing the power supplies on top of each other. Do not connect the power supplies in series in an installation orientation other than the standard installation orientation (input terminals down).

Note that leakage current, electromagnetic interference, inrush current and harmonics will increase when multiple power supplies are used.

Refer to the figure below for the wiring method:

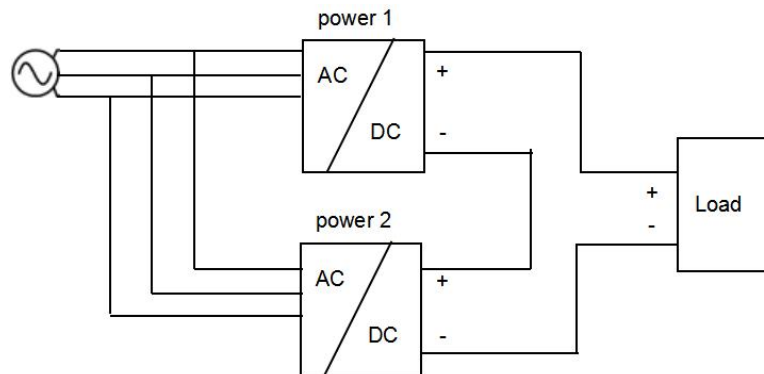

## 2.12 Work In Parallel

### 2.12.1 Redundancy

Power module outputs can be connected in parallel for redundancy, increasing system reliability. The maximum power of the redundant system needs to be de-rated to ensure that the redundant system can still meet the rated load requirements when a power supply module fails. Currently, the common practice is to build a redundant system by the N+1 method, that is, N+1 power supplies are connected in parallel. Support the maximum load current  $N \cdot I_{\text{omax}}$ , where  $I_{\text{omax}}$  is the rated output current of each power supply, for example, the rated output current of each power supply is 20A, and 2+1 are connected in parallel, thus constructing a  $2 \cdot 20\text{A} = 40\text{A}$  redundant system.


The power module supports 2+1 parallel redundant operation.

The Oring circuit is used inside the power module, and when any one of the power modules in parallel fails, it will not affect the work of other power modules.

### 2.12.2 Current Share

The current sharing bus (current\_share) between multiple machines is short-circuited with each other, and SGND is short-circuited with each other at the same time.

The output voltage difference of each single module is less than or equal to 100mV, and a better comprehensive effect of line terminal output voltage and current sharing can be obtained. The wiring method of the current sharing function is shown in the following figure:

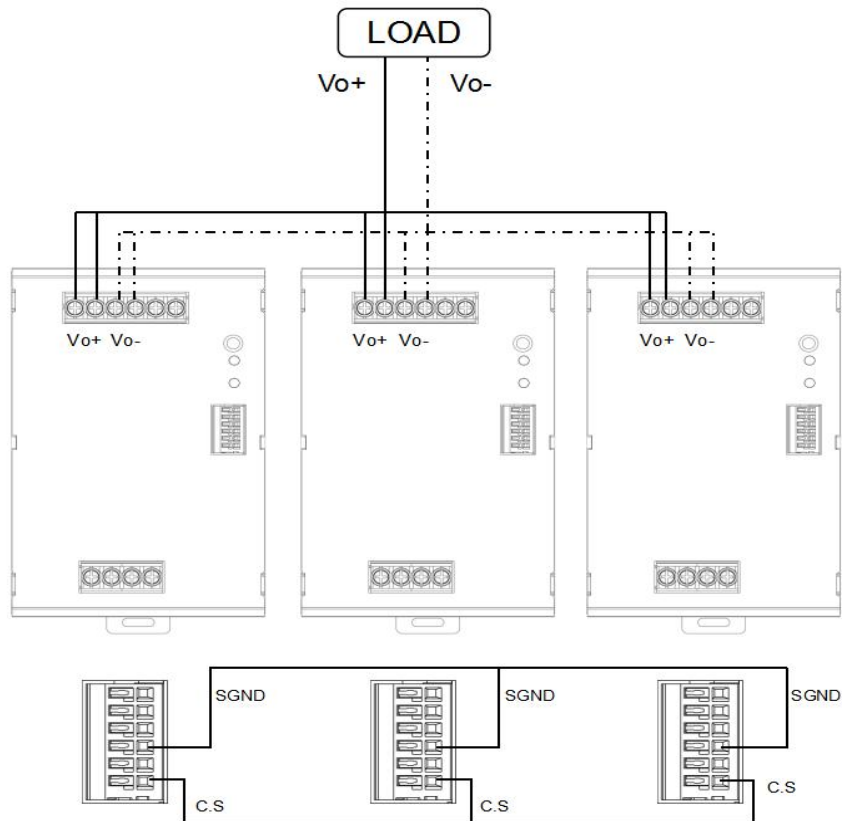

Note: 1. When used in parallel, the number of parallel modules cannot exceed 3.

2. When the power modules work in parallel, there is an active current sharing circuit inside to ensure that the current between each module remains balanced.

The active current sharing circuit adopts the automatic master-slave current sharing method. Each power supply module has a current sharing bus signal (C.S). When working in parallel, the current sharing buses of all power modules must be connected together. The current sharing bus signal is located at pin 6 of CN5. At the same time, it is necessary to connect the signal terminals SGND of the power module together, and the SGND of the signal terminal is located at pin 4 of CN5.

The output voltage of each power module will affect the current sharing accuracy. The output voltage of the power module is rated voltage  $\pm 100\text{mV}$ . In practical applications, if the output voltage value needs to be adjusted, the output voltages of all parallel power modules need to be adjusted to the same voltage. The recommended voltage range is: target voltage value  $\pm 100\text{mV}$ .

After the output load of each power module is greater than 50% of the rated load, the current sharing accuracy is required to be  $\pm 5\%$ . The calculation formula of current sharing is:

$$\text{Power supply 1's average accuracy} = \frac{I_{o1} - (I_{o1} + I_{o2}) / 2}{(I_{o1} + I_{o2}) / 2} * 100\%$$

$$\text{Power supply 2's average accuracy} = \frac{I_{o2} - (I_{o1} + I_{o2}) / 2}{(I_{o1} + I_{o2}) / 2} * 100\%$$


$I_{o1}$ : The output current value of the power supply 1 in the parallel power module;

$I_{o2}$ : The output current value of the power supply 2 in the parallel power module.

## 2.13 PC Monitoring

In a parallel system, if you need to identify the information of the power modules, you need to monitor each parallel power module by the host computer. The connection diagram is as follows:



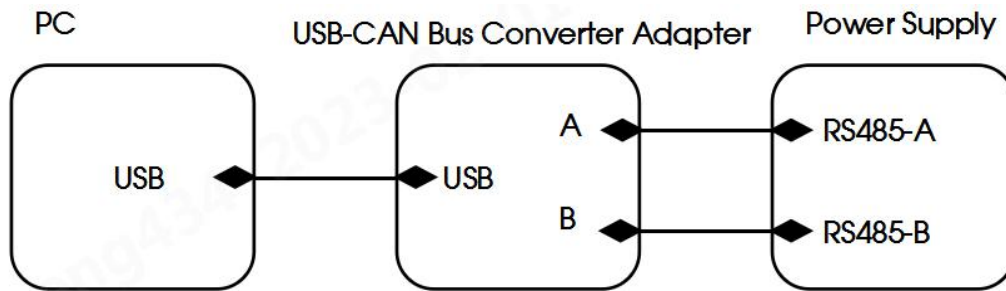

That is: Connect the RS485-A and RS485-B of the signal terminal to the USB interface module

When the host computer communication is turned on, you can see the following monitoring screen




Product Information	Output Parameter	Output State
Product Serial: <input type="text"/>	Output Voltage: <input type="text"/> V	Load: <input type="text"/> Normal
Product Model: <input type="text"/>	Output Current: <input type="text"/> A	Voltage: <input type="text"/> Normal
Serial Number: <input type="text"/>	Output Power: <input type="text"/> W	Temperature: <input type="text"/> Normal
Software Versions: <input type="text"/>	Internal Temperature: <input type="text"/> °C	
Manufacturer: <input type="text"/>		
Production Date: <input type="text"/>		

Note: After the serial port is successfully opened, the information of “output parameter” and “output state” will be automatically obtained, and the “product information” needs to be manually clicked on the read case after the “product information”.

## 2.14 Available In 3-Phase 2-Wire Systems

This power supply can also be used for permanent operation of two-wire in a three-phase system.

When operating the two-wire in a three-phase system, the output power must be derated according to the following curve, and the input operating voltage can only operate at 340VAC-600VAC. Exceeding this derating limit for a long time will cause the power supply to overheat and shut down.

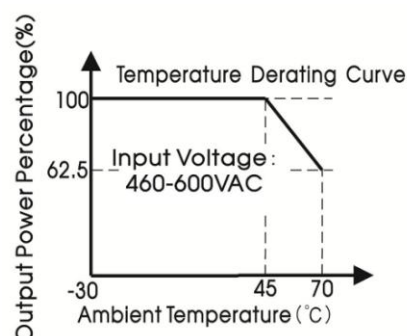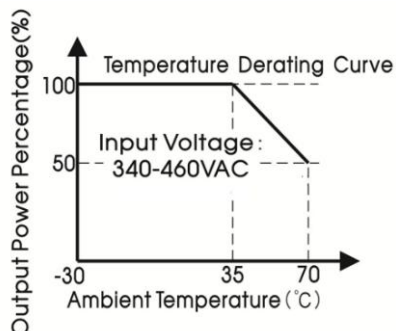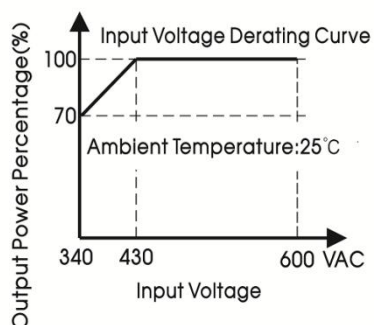


Note: Basic performance such as electromagnetic compatibility performance, hold-up time, loss and output ripple are different from three-phase operation. This working method is not covered in the certification, and operation two wires in a three-phase system does not meet the safety certification.

## 2.15 Back Voltage Load

Loads such as decelerating motors, inductors can feed voltage back into the power supply. This property is also known as feedback voltage resistance or resistance to opposing electromagnetic forces.

The power supply is resistant to voltage back into the supply by the load and will not fail regardless of whether the power supply is on or off. The function diagram as below:

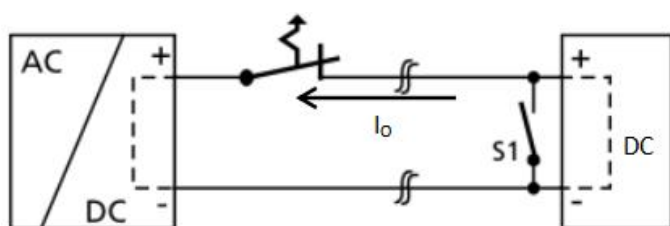

Maximum allowable feedback voltage	
Model	Maximum feedback voltage
ADTF480-24	35VDC
ADTF480-36	63VDC
ADTF480-48	63VDC

## 3. Installation Requirements

### 3.1 Safety Introduction

WARNING: RISK OF ELECTRIC SHOCK DURING HIGH VOLTAGE WORKING WITH THIS EQUIPMENT

- After the power module is disconnected from the input AC or DC power, leave it for at least one minute before starting to operate it.
- When installing the input cable to the power module, first connect the ground terminal, and then connect the L1, L2 and L3 cables.
- When removing the input wire, first remove the L1 wire, L2 wire and L3 wire, and then remove the ground wire.
- When disassembling and assembling, make sure that no objects fall into the inside of the power module.
- Be careful of high temperature burns
- After the power module works in a high temperature environment, wait for its shell to cool before operating it.
- This product needs to be installed by professionals and needs to be used with other equipment.



### 3.2 Safety Requirements

When installing, pay attention to the primary side and the protective ground. The creepage distance and electrical clearance of the primary side and the secondary side meet the safety requirements, refer to EN/UL61010.


## 3.3 Installation Method


Installation direction: When installing, the port of the output end should be upward, and the port of the input end should be downward. (See below)

Note: Pay attention to the temperature rise of the device in different installation modes. Derate the device according to the actual situation.

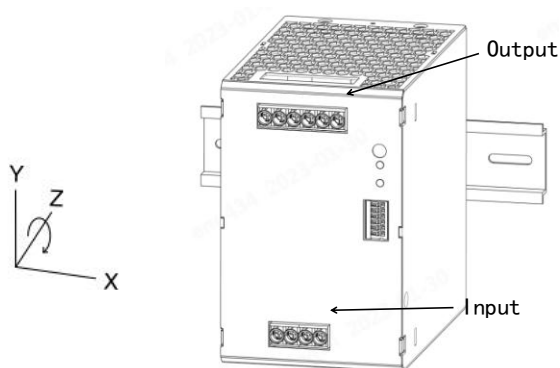
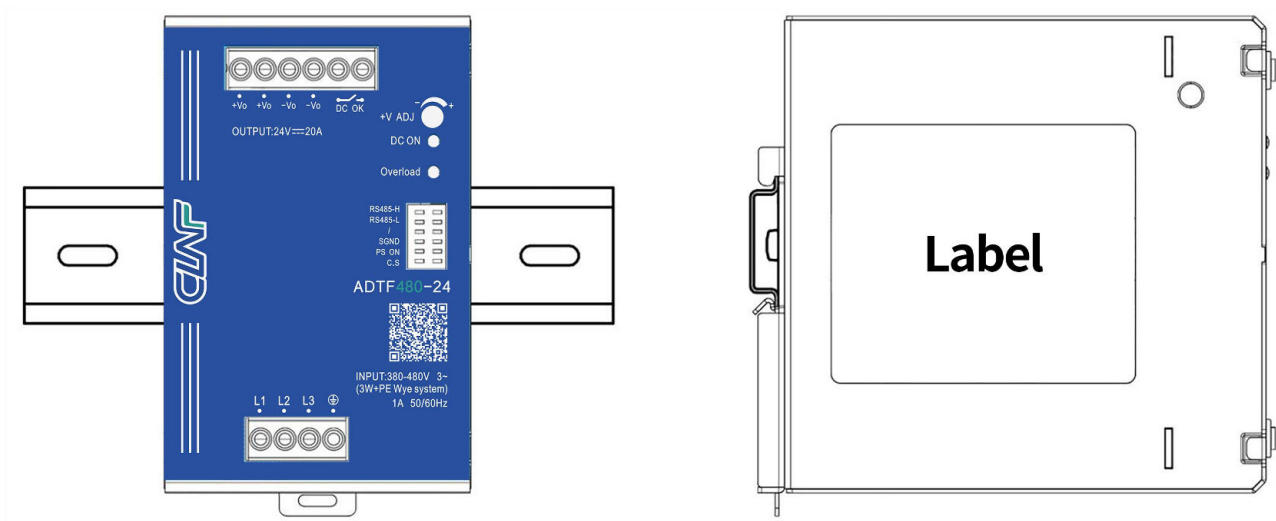


Rotate the installation position (0° Z-Axis)


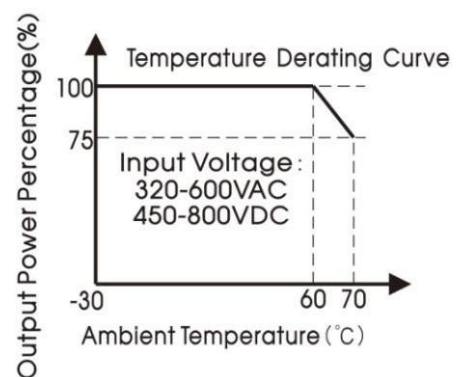


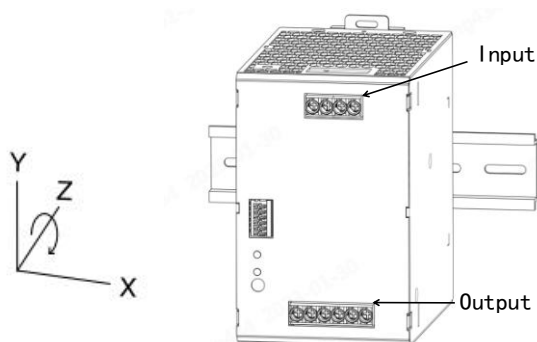


Rotate the installation position (180° Z-Axis)

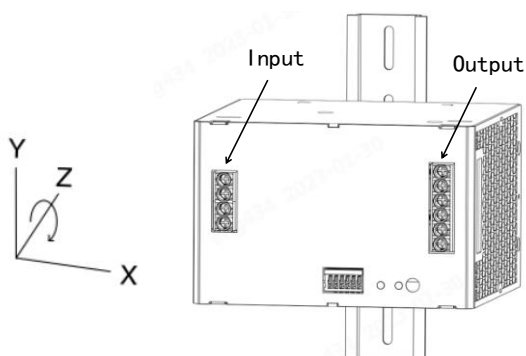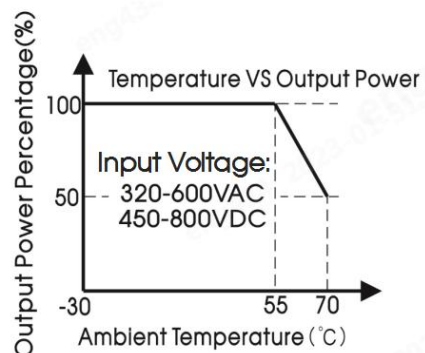


Rotate the installation position (90° Z-Axis)

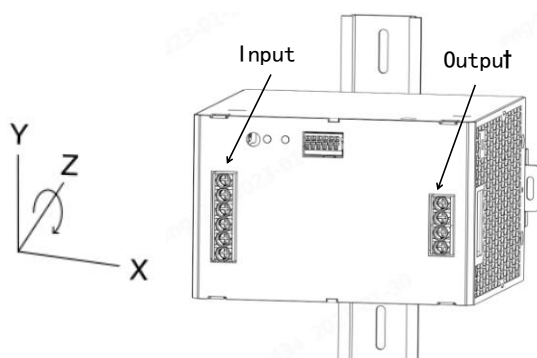
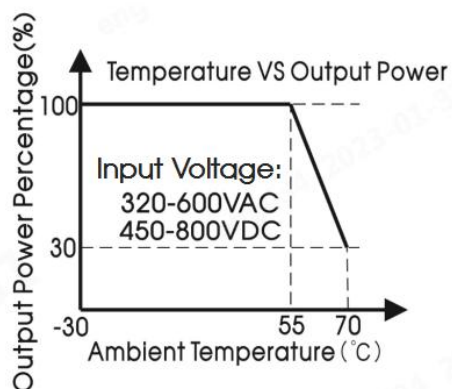


Rotate the installation position (270° Z-Axis)

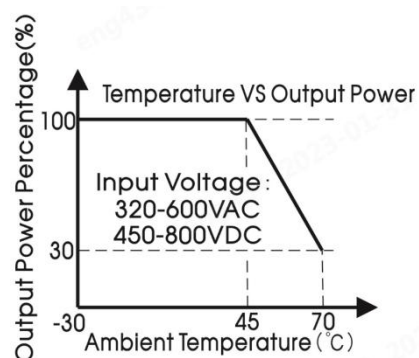

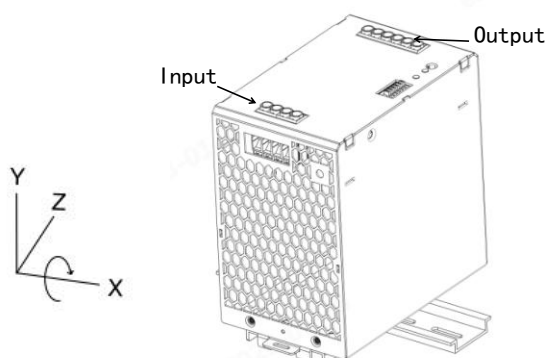

Rotate the installation position (90° X-Axis)

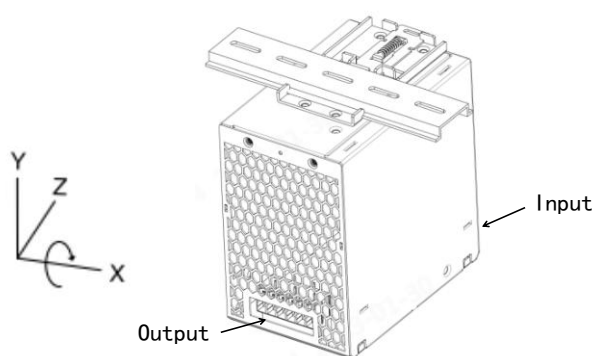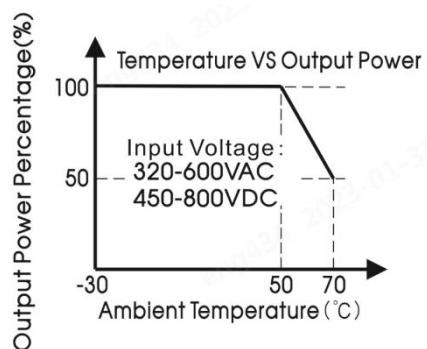

Rotate the installation position (270° X-Axis)

