

OVX-6400

6400VA DC/AC INVERTER

GENERAL FEATURES:

Sine wave output voltage
Suitable for motors control
Adjustable output frequency
Adjustable output voltage
Input voltage according to:

EN50163:2006 EN50124-2:2017

High input-output isolation 5400Vrms

Remote off opto-coupled

Alarm by isolated relay contacts

Configurable input: Reverse or Mid power

Remote control via RS232

CAN BUS

Railway applications according to

EN61287-1

Fire and smoke: EN45545-2 pending















	Input voltage	Output voltage	Output power
000 6400 7704	400 000 1/4-	400 1/ thuse phase	6 kW
OVX-6400-7701	400900 Vdc	400 V three phase	6.4 kVA 8 kWpk



INPUT	
Nominal DC input voltage	600/750Vdc
Minimum DC input voltage	400V
Maximum DC input voltage	900V continuous 2800Vdc according to EN50124-2=2017 4.2.2 and Annex A
Input voltage standard	EN50163 (Supply voltage of traction systems)
Inrush current	15A
OUTPUT	
Output type	AC 3ph
Output Voltage	400V
Voltage tolerance	5±%
Output voltage range	20100% of Vout (adjust via remote control)
Output frequency	50 / 60Hz via DIP-switch, 575Hz via RS-232
Maximum continuous current (Irms)	9.24A
Maximum peak current 5s (Irms)	11.5A
Continuous active / apparent power	6000W / 6400VA
Peak active / apparent power 5s	8000W / 8000VA
Load regulation	< 4.5%
Line regulation	< 2%
Output wave distortion THD	< 2% (average of 16 samples)
Output HF ripple	< 2.5%
ENVIRONMENTAL	
Storage temperature	-25 <mark> 80°</mark> C
Operating ambient temperature: Full load 62.5% load	-25 55°C, 70°C 10 min (SU3 class, according to EN61287-1) -25 70°C
Relative humidity without condensation	5 95% with no condensation
Maximum Altitude	2000m at full load, 2500m at 95% of load
Cooling	Internal forced air controlled
Environmental regulations	RoHS & Reach according to directive 2011/65/EU
Shock and vibration	EN61373 pending
EMC	
Immunity according	EN61000-6-2, EN50121-3-2
Emissions according	EN61000-6-4, EN50121-3-2
SAFETY	
Safety according to	EN50124-1 Railway app. (Insulation coordination)
Dielectric strength: Input /output	5400Vac / 50Hz / 10s
Dielectric strength: Output / Earth	1500Vac / 50Hz / 1min
Dielectric strength: Input / Earth	5400Vac / 50Hz / 10s
Pollution degree	PD2
Overvoltage category	OV3
Fire and smoke	EN45545-2 pending
RELIABILITY	
MTBF	>150.000h @40°C according to SN29500
Service life	20 years
Life cycle	20 years
MECHANICAL	,
Dimensions (H x W x D mm)	85,8 x 372 x 450,3
Weight	< 12000 g
Shock and Vibrations according to	EN61373 Category 1 class B body mounted
Shock and vibrations according to	2.101373 Category 1 class D body mounted




Configurable input (reverse or mid-power)

IP20 Protection degree **PROTECTIONS** Current and I²T limited (see overload protection curve) Against overloads Against over-temperature Shutdown with auto-recovery **CONTROL** Output OK LED Green Input OK LED Green Red Alarm LED Input alarm Open when alarm. Maximum rating: 0.16A at 160Vdc Output alarm Open when alarm. Maximum rating: 0.16A at 160Vdc Remote OFF input Off applying 15...143 Vdc, Impedance $>35k\Omega$


ON: applying 15...143 Vdc, Impedance $>35k\Omega$



BLOCKS DIAGRAM

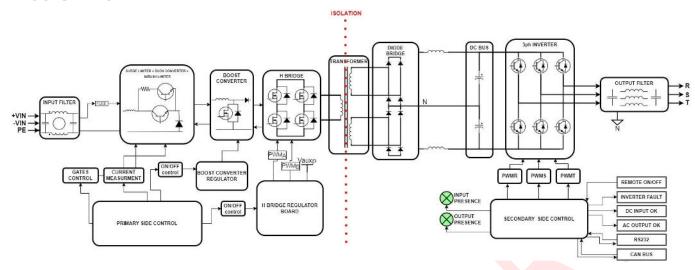

CONNECTIONS

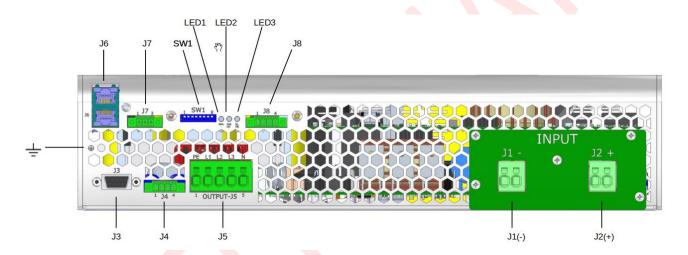

J1	-Vin					
J2	+Vin					
J5 - 1	Protective Earth	Spring clamp terminals				
J5 - 2	Output R					
J5 - 3	Output S	cables 2.5 4mm ²				
J5 - 4	Output T					
J5 - 5	Output Neutral					
J4 - 1	+ Configurable input					
J4 - 2	- Configurable input	Phoenix Contact MC1.5/4-GF-3.81 Recommended female: Phoenix Contact MC1.5/4-STF-3.81				
J4 - 3	+ Remote					
J4 - 4	- Remote	Thoenix Contact MC1.5/4 511 5.01				
J8 - 1	Status output	DI				
J8 - 2	Status output	Phoenix Contact MC1.5/4-GF-3.81 Recommended female:				
J8 - 3	Status input	Phoenix Contac MC1.5/4-STF-3.81				
J8 - 4	Status input	Thochix contac Mc1.5/4 511 5.01				
J7 - 1	CAN L (optional Can bus)	Phoenix Contact MC1.5/3-GF-3.81				
J7 - 2	CAN H (optional Can bus)	Recommended female:				
J7 - 3	GND CAN	Phoenix Contac MC1.5/3-STF-3.81				
J3	RS-232	Female D-Sub DB9				
J6A -J6B	Optional Parallel operation	RJ45				



DESCRIPTION


The OVX-6400 is a three-phase sine-wave DC-AC inverter designed not only to work within 400 to 900V input voltage range but also to withstand surges and over-voltages as described in EN50124-2.

The unit allows:

- Changing the output frequency by means of DIP-switch-7 of SW1. OFF: 50Hz or default programmed, ON: 60Hz
- Change local/remote (waiting RS-232 commands) by means of DIP-switch-6 of SW1. OFF: local, ON: remote
- Shutdown applying voltage output 15 to 143V on pins 3 and 4 of J4
- Start-up motors by means of a soft start. In the start-up, the output voltage rises linearly from 0V to set voltage and the frequency from the initial to the set one. The start-up ramp slope may be changed via RS-232
- Set the rotation speed of a motor according to the appropriate Voltage/Frequency ratio.
- Configurable input (pin 1 and 2 of J4):
 - o Reverse mode: Changing the rotation direction for the next start-up of a motor by applying voltage between 15 and 143V.
 - Mid power mode: Changing the output frequency in V/F mode from nominal to a mid-power frequency by applying voltage between 15 and 143V.
- Monitoring the status of the input and output voltage through the contacts of two separate solid state relays.
- Set and monitor parameters via RS-232, CAN BUS.

The OVX-6400 is equipped with a maximum average power protection as well as maximum output peak current protection. This protects the semiconductors even when an output short-circuit occurs. It also features a disable function for input undervoltage, which allows protecting the batteries from harmful discharges.

POWER DERATING vs AMBIENT TEMP.

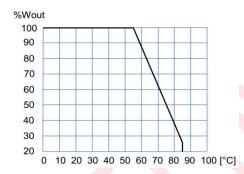

START-UP

- The unit has 6 threaded holes for the fixation on a mounting surface.
- The unit has internal fans. For an appropriate cooling, the air input and output should be free of elements that cause and an air flow reduction (minimum recommended distance to other objects 90mm).
- Make connections as shown in the figure.
- The default output frequency is 50Hz. For 60Hz simply actuate the dip-switch as indicated in the figure.

For safety reasons, the following requirements must be met:

- Provide the equipment with some kind of protective enclosure that complies with the electrical safety directives in effect within the country where the equipment is installed.
- Include an input fuse with a rating immediately higher than the maximum input current.



RS232 communication port


It is possible to control and monitor de unit via RS232 by means a terminal emulator like "Tera Term" or "Putty". Also it is possible to control and monitor de unit directly using the protocol showed in table:


Protocol configuration: ASCII code, 57600 bauds, parity none, 8 bits, 1bit stop


Header		Function Parameter			Returns	Explanation				
			v v Y		PTV===.=	Input voltage in Volts Input voltage ripple in Volts Output voltage in Volts RMS Phase-Neutral				
					PTv==.=					
					PTYRN===== [13]YSN=====					
		-	I T t F f y		[13]YTN====	([13] = char 13 of ASCII code)				
					PTIR===.==[13]IS===.== [13]IT===.==	Output current in Amps RMS ([13] = char 13 of ASCII code) Internal temperature1 in K Internal temperature 2 in K Nominal output frequency in Hz Actual output frequency in Hz				
					PTT===.=					
					PTtess.s					
					PTF===.=					
		L			PTfess.s					
					PTy===.=	Actual output voltage set-point in V				
		_			PTS===.	Inverter state 999.9 → Enabled 000.0 → Disabled 222.2 → Blocked by overload 111.1 → Blocked by overload or shortcircuit				
			M R		PTM	Model number				
					PTR	Firmware version				
				her	PTE	Command not supported				
			1		OK / ERR	Set the low input voltage timed shutdown in V				
			2		OK / ERR	Set the minimum alarm input voltage in V				
	R		3		OK / ERR	Change the status bit (after start up enabled with SW3 =LOCAL and disabled wit SW3 =REMOTE) 999.9 → Inverter enabled 000.0 → Inverter disabled				
			4	===.=	OK / ERR	Set the output voltage Phase-neutral in Vrms (Vo)(output must be stopped) 040.0≤ ■■■.■ ≤ 230.0				
Р			5		OK / ERR	Set the maximum output current in Arms 20% I _{nom} ≤ ■■■.■ ≤ 100% I _{nom}				
		G	6	===.=	OK / ERR	Set the nominal output frequency in Hz (Fo) (output must be stopped) 005.0 ≤ ■■■.■ ≤ 075.0				
			7		OK / ERR	Set the alarm maximum output current 0 < ■■■.■ ≤ 100% I _{max warning}				
			8		OK / ERR	111.1 → Reset the inverter				
			L		OK / ERR	Set the minimum input starting voltage in Volts				
			0		OK / ERR	Set the initial frequency in the startup (Fi) 005.0 ≤ ■■■.■ ≤ 075.0				
			P		OK / ERR	Set the ramp-up in increment of "N" cycles per Hz in mode V/F, frequency change or start-up (Note-1) 001.0 ≤ ■■■.■ ≤ 100.0				
			Q		OK / ERR	Set the ramp-down in decrement of "N" cycles per Hz in mode V/F (Note-1) 002.0 ≤ ■■■.■ ≤ 100.0				
			Y		OK / ERR	Change the working mode of the input J4-1,J4-2 111.1 → Input as reverse phase control (default) 222.2 → Input as mid-power control (Note-2)				
			X		OK / ERR	Set the mid-power frequency for V/F mode by the use of input J4-1,J4-2 005.0 ≤ ■■■.■ ≤ 75.0				
			1	===.=	OK / ERR	Set a new output frequency in Hz (output must be run and not stored in memory) 005.0 ≤ ■■■.■ ≤ 075.0				
			2	===.=	OK / ERR	Set a new output voltage in Volts (output must be run and not stored in memory) 040.0 ≤ ■■■.■ ≤ 230.0				
		М	3	===.=	OK / ERR	Set a new output frequency in Hz in mode V/F (output must be run and not stored in memory) 005.0 ≤ ■■■.■ ≤ 075.0				
			4		OK / ERR	Changes the output phase order (output must be run and not stored in memory) 111.1 → Phase RST (direct phase) 222.2 → Phase SRT (reverse phase)				

OTHER PORTS PENDING



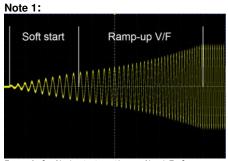

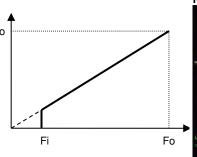

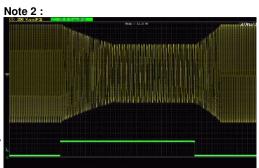

Example for N=1: start-up time = $N \times 1.7s$ for changes from 16Hz to 50Hz

ges from 16Hz to 5UHz

Mode V/F curve


Example for change from 50Hz / 400V to 30HZ and 240V with ramp-down of 2 cycles /Hz and ramp-up de 1 Cycle/Hz. Yellow: output voltage and Green: Mid-Power input signal

WORKING PARAMETERS

WORKING PARAPIETERS		
Thermal protection		
Internal warning temperature (output alarm)	88	ōC
Internal shutdown temperature	92	ōC
Internal restart temperature	75	°C
Internal temperature of fan start-up	45	∘C
Input voltage parameters	750Vdc	
High input voltage instantaneous shutdown	1300>	Vdc
High input voltage timed shutdown (t)	1270 - 1080	Vdc
Time to shutdown (t)	Controlled via temperature measurement	s
Start-up voltage	390	Vdc
Low input voltage instantaneous shutdown	370	Vdc
Time to shutdown (t)	500m	s
Output voltage parameters		
Output voltage	400 (line to line)	Vac
Output under-voltage shutdown	< 85% of setting 1000ms	
Warning voltage (output alarm)	< 90% of setting 200ms	
Initial start-up frequency	5	Hz
Soft start duration	1 cycles	
Ramp-up V/F	1 Hz/cycle	
Output current parameters		
Maximum continuous output current	9.24	Α
Warning current (output alarm)	8.8	А
Maximum overload I ² t	See figure below	
Time between restart attempts	4000	ms
Number of attempts of consecutive overload	5	
Working failures and reset		
Lock for continuous overload or internal failure	Unlimited time	
Reset time by input disconnection	> 2	min


Configurable parameters underlined

OVERLOAD PROTECTION

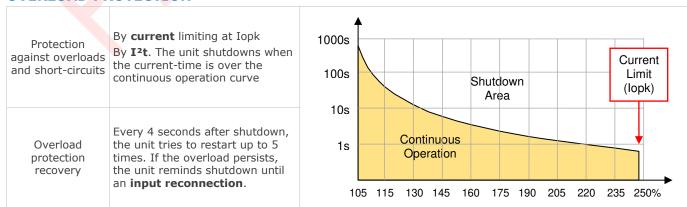




DIMENSIONS

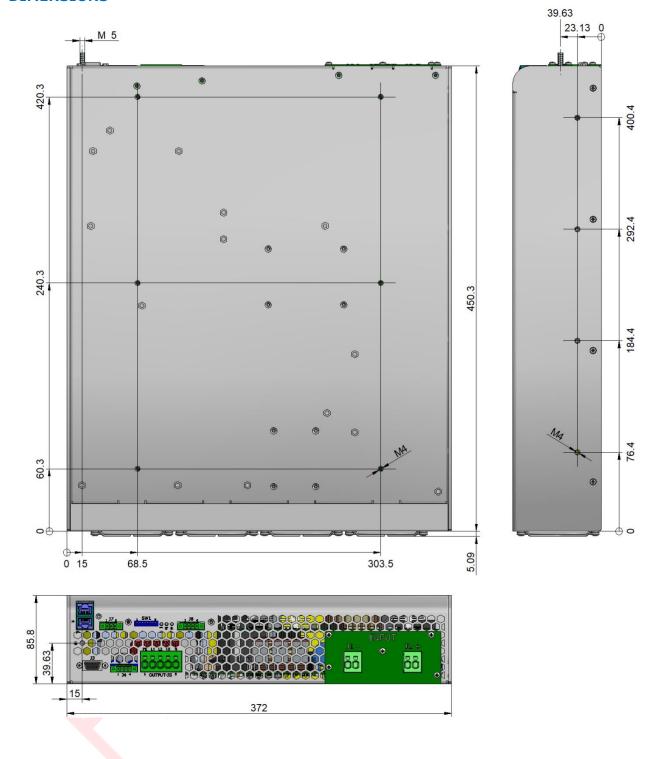



ACCESSORIES

Description	Notes	CODE	
Mounting brackets kit	Contains two brackets and screws	9282	

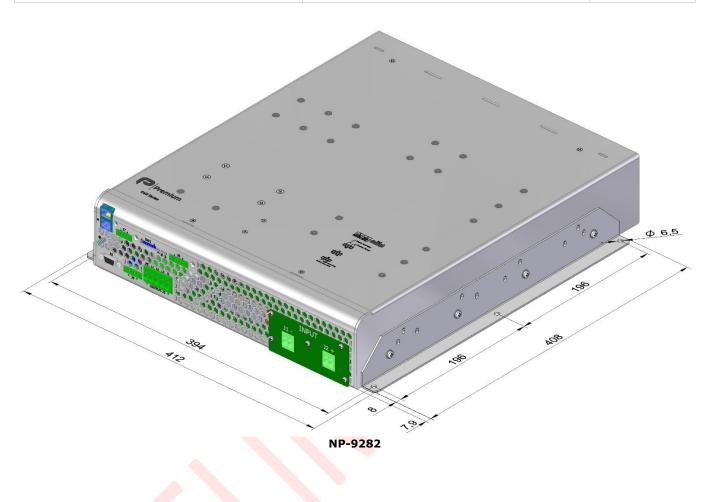



EU, UKCA DECLARATION OF CONFORMITY

The undersigned, representing the following:

Manufacturer: PREMIUM, S. A.,

Address: C/ Dolors Aleu 19-21, 08908 L'Hospitalet de Llobregat, SPAIN

herewith declares that the product:

Type: DC/AC converter **OVX-6400** Model:

is in conformity with the provisions of the following EU directive(s):

2014/35/EU Low voltage / The electrical equipment (safety) regulations

SI 2016 No 1101

2014/30/EU

EMC / Electromagnetic compatibility regulations SI 2016 No 1091

2015/863/EU RoHS / Restriction of the use of certain hazardous substances in electrical and

SI 2012 No. 3032 electronic equipment

and that standards and/or technical specifications referenced below have been applied:

EN50124-1:2017 Railway app. (Insulation coordination)

EN 62368-1: 2014 Safety. Audio/video, information and communication technology equipment

Generic emission standard EN 61000-6-3: 2007 EN 61000-6-2: 2005 Generic immunity standard

Railway applications. Power converters installed on board rolling stock IEC 61287-1: 2015

EN 50121-3-2: 2016 Railway applications. EMC Rolling stock equipment

CE marking year: 2022; UKCA marking year: 2022

Notes:

For the fulfilment of this declaration the product must be used only for the aim that has been conceived, considering the limitations established in the instructions manual or datasheet.

L'Hospitalet de Llobregat, 10-02-2022

Albert Sole Technical Director

PREMIUM S.A. is an ISO9001and ISO14001 certified company by Bureau Veritas

^{*} Optional, See annexe



ANNEXE

	Applica	ble values for t	the different s	ection	ns of the norn	n 61287-1 :	2015		
4.2.2	Working altitude Up to 2000m								
4.2.3	Ambient temperature	Class T3 inside vehicle compartment (-25 to 55°C full load) Class T3 Inside cubicle (55 to 70°C load <62.5%)							
4.2.5	Shocks and vibrations	According EN61373:2010 Category 1 class B							
772.5	EMC Electromagnetic Compatibility	Radiated emissions Conducted emissions Test Electrostatic discharge	Norm IEC55016 IEC55016 Norn IEC61000		30MHz 230MH 1 3 150kHz	quency230MHz Hz1GHz .3GHz .6GHz z500kHz z30MHz Severity ±8kV ±8kV	Limits 40dB(µV/m) Qp 47dB(µV/m) Qp Do not ap Internal freq. < 99dB(µV) (93dB(µV) (Conditions Air (isolated pa Contact (conductiv	k at 10m ply 108MHz Qpk Qpk srts)	<u>Р</u> — В
4.5.3.19		Radiated high frequenc	IEC61000)-4-3	X/Y/Z Axis	20V/m 10V/m 5V/m 3V/m	0.081.0GHz M. 80 1.42.1GHz M. 80 2.12.5GHz M. 80 5.16Ghz M. 80%	% 1kHz % 1kHz	A
		Fast transients)-4-4	Input Output Signal PE	±2kV ±2kV ±2kV ±1kV	Tr/Th: 5/50 i	าร	А
		Surge	Surge IEC61000-4-5		Input L to L Input L to PE	±1kV ±2kV	Tr/Th: 1.2/50	μs	В
		Conducted RF IEC61000)-4-6	Input Output Signal PE	10V 10V 10V 10V	0.1580MHz M. 80% 1kHz		А
		Magnetic field IEC61000-4-8 X/Y/Z Axis 300A/m 0Hz, 16.7Hz, 50/						/60Hz	Α
		P= Performance1 Visual Inspe		ne, PE	= Protective Ea	arth		Routine	
4.5.2.3	Tests list	2 Verification of size and tolerance 3 Weight 4 Marking inspection 5 Functional test on refrigeration system 6 Sealing test 7 Grade protection test 8 Dielectric strength test 9 Resistance to isolation test 10 Test for mechanical and electrical protection and for the measurement equipment 11 Low load test 12 Switching test 13 Measurement of acoustic noise 14 Heating test 15 Power loss test 16 Power overvoltage test and energy transients 17 Fast changes in load test 18 Inspection of safety requirements 19 Shock and vibration test 20 EMC test 21 Step in power line test 22 Interruption of voltage supply test 23 Current Sharing				Type Type Routine Type N/A N/A Routine Type N/A Type Routine Routine Type Type Type Type Type Type Type Typ			

www.premiumpsu.com
11 / 11
14-11-2022
Powering Your Challenge
CA-638-8